

# UPDATE

BBT MAIN DEVICE / Bb RADIO / Bb SPEAKER

## BBT STANDARD / BBT MASTER


### STEP 1.

Disable your PC's bluetooth.



Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.01.0.4

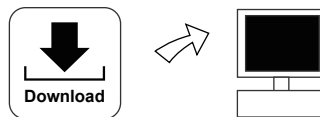


All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

### STEP 2.

Open the UPDATE WIZARD and connect PC and BbTALKIN device with micro USB cable.

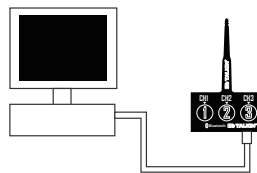

Press & Hold 5 sec. volume button (+/-) at the same time until LED flashes red & blue.

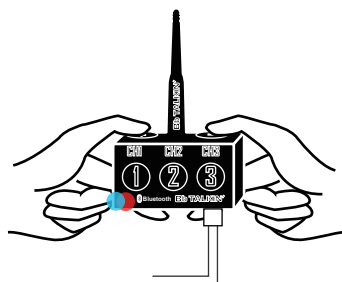

### STEP 3.



Download firmware and install on your PC.

Download FW(firmware), unzip file and save on desktop.

For **MASTER** unit BM v1.021

For **STANDARD** unit BBT v1.026

**!! WARNING!!**


**DO NOT install MASTER firmware to STANDARD device.**

**DO NOT install STANDARD firmware to MASTER device.**

### STEP 4.

Start to update.

Do not plug out the USB cable while updating.

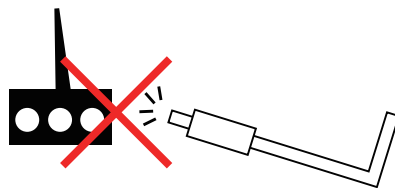

It may take few minutes to update.

**LOADING...**

### STEP 5.


Press FINISH and the update is completed.



# Bb RADIO


## STEP 1.

Disable your PC's bluetooth.

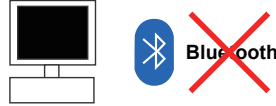

Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.01.0.4

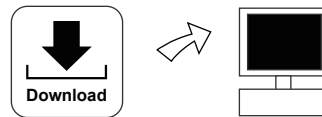


All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

## STEP 2.

Open the UPDATE WIZARD and connect PC and bb radio with USB-3.5mm charge cable which comes with.

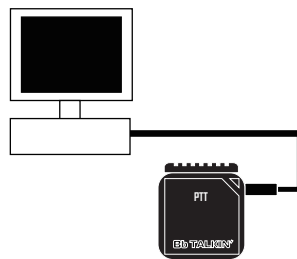

Press & Hold 5 sec. volume button (+/-) at the same time until LED flashes red & blue.

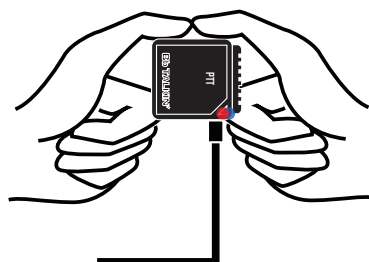

### STEP 3.

Download FW(firmware), unzip file and save on desktop.  
For bb radio, the latest firmware is BR v1.2.




---

### STEP 4.

Start to update.

Do not plug out the USB-3.5mm charge cable while updating.

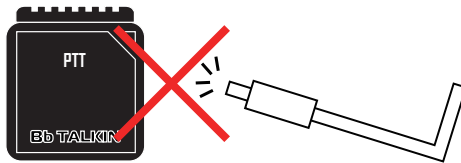

It may take few minutes to update.

**LOADING...**

---

### STEP 5.


Press FINISH and the update is completed.



# Bb SPEAKER


## STEP 1.

Disable your PC's bluetooth.

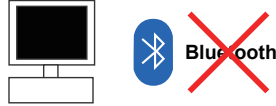

Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.01.0.4

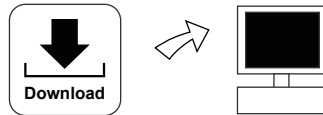


All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

## STEP 2.

Open the UPDATE WIZARD and connect PC and Bb SPEAKER with micro USB cable.

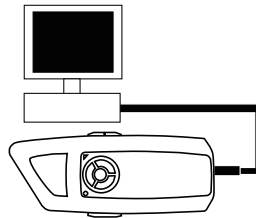

Press & Hold 5 sec. CH1 &CH2 button at same time while power is OFF until LED flashes red & blue.

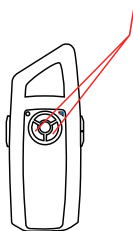

## STEP 3.

Download FW(firmware), unzip file and save on desktop.


For Bb SPEAKER, the latest firmware is BS v1.1.



## STEP 4.

Start to update.

Do not plug out the USB cable while updating.

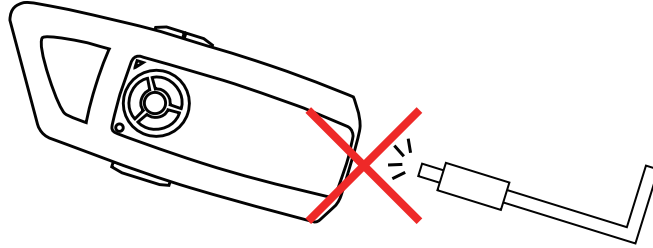

It may take few minutes to update.

## LOADING...

---

## STEP 5.

Press FINISH and the update is completed.

